

## Disabling LM-2 Local Source & Level Controls

Disabling the Source and Level controls on the LM-2 allows for a secondary control such as the RSL-6 to control one or multiple zones.

